

DENOX

INSTALLATION INSTRUCTION 6.5 INCH GARDEN SPEAKER MODEL: GARDEN PRO 6 Denoxaudio.com

Specially designed for : Outdoor, indoor, gardens, patios, pool side, hotels, shopping malls, stores, theme parks, civic centres, parking lot, playground and golf courses.

6.5 inch
Garden Speaker
Water Proof
Two Way 6.5 inch Coaxial Speaker Built-in
Woofer:
8 OHM, injection PP cone,
Rubber surround,
25MM voice coil,
Steel painting basket
Tweeter:
PEI dome/25mm voice
coil/neodymium
magnet system
Transformer: 100V 30W/20W/10W/
5W/8OHM,
with the cable select the output



Wiring Connection :

BROWN	BLUE	GREEN	YELLOW	GRAY	RED	PURPLE
30W	20W	10W	5W	COM		+ 8Ω


100 V AUDIO OR 8Ω REMOVE JUMPER FOR 8Ω OPERATION JUMPER FOR 100V OPERATION ONLY

Connect the connections at the loudspeaker with the loudspeaker outputs of the amplifier :

1> FOR USE IN 100V PA SYSTEM :

Colored connection > " POSITIVE " (+) of desired power
Gray connection > " NEGATIVE " (-) COMM


(N.B. : The PURPLE and RED cables of 8Ω must be **CONNECTED**)
as the drawing " Connection I " shown.

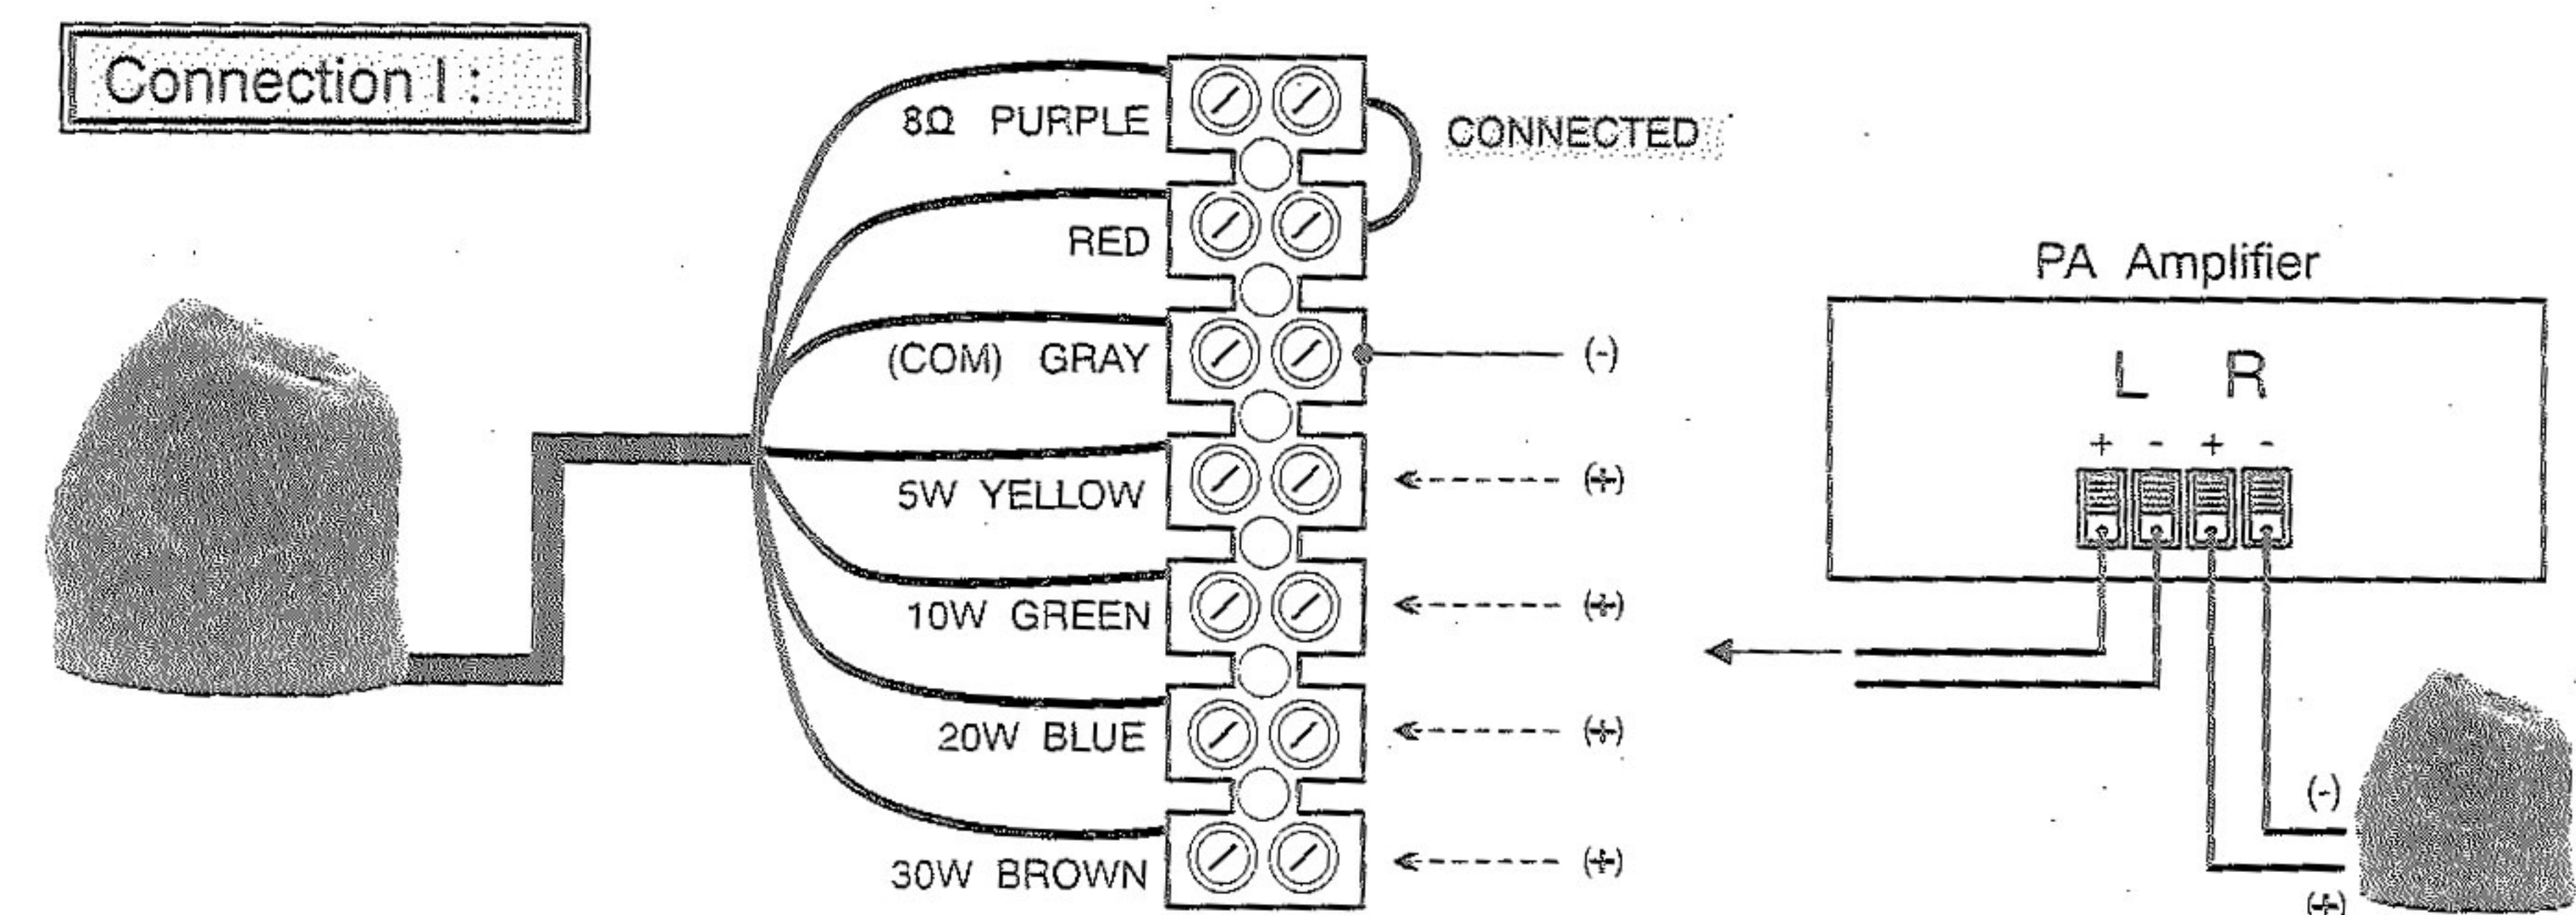

2> FOR USE IN HiFi SYSTEM (8Ω) :

Purple connection > " POSITIVE " (+) loudspeaker output
Gray connection > " NEGATIVE " (-) loudspeaker output

(N.B. : The PURPLE and RED cables of 8Ω must be **DISCONNECTED**)
as the drawing " Connection II " shown.

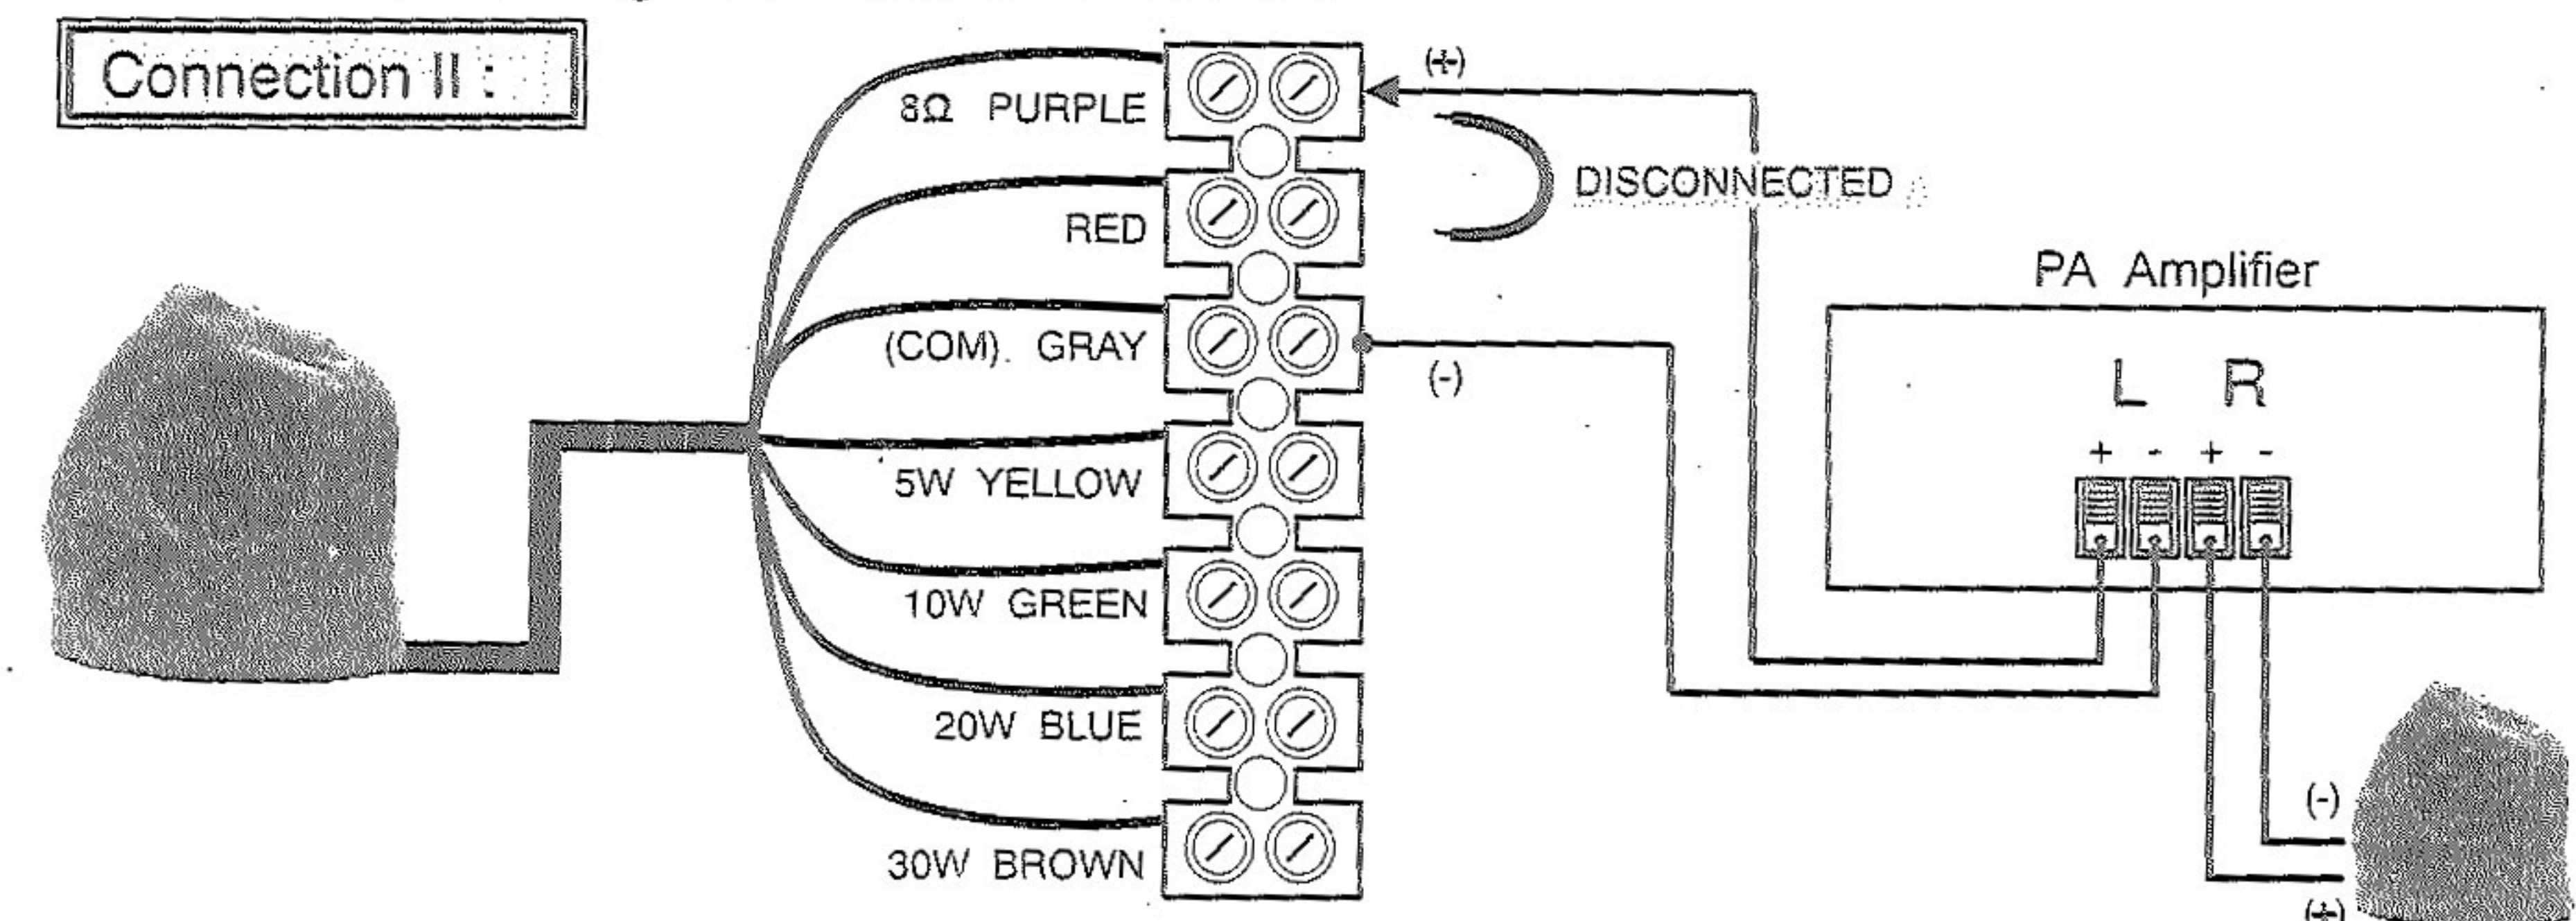

When connecting the loudspeakers make sure that the connecting cable is not squeezed or damaged by sharp edges.