

# geratech<sup>®</sup>

## EGE-6UHD-444AL

4x4 HDMI 2.0 18Gbps Matrix Switcher



# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### Thank you for purchasing this product

For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

### Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

### Table of Contents

<b>1. Introduction</b> .....	<b>1</b>
<b>2. Features</b> .....	<b>1</b>
<b>3. Package Contents</b> .....	<b>1</b>
<b>4. Specifications</b> .....	<b>2</b>
<b>5. Operation Controls and Functions</b> .....	<b>3</b>
5.1. Front Panel.....	3
5.2. Rear Panel.....	4
5.3. Connecting to the Switcher.....	4
5.4. Using the Switcher.....	5
<b>6. IR Remote</b> .....	<b>5</b>
<b>7. Using the Built-In Web GUI Interface</b> .....	<b>6</b>
<b>8. API Control Command</b> .....	<b>14</b>
<b>9. Application Example</b> .....	<b>19</b>

# EGE-6UHD-444AL

4x4 HDMI 2.0 18Gbps Matrix Switcher



## 1. Introduction

This high performance HDMI Matrix Switcher can switch any of these four HDMI 2.0 sources to four HDMI 2.0 displays. Each input and output supports up to 4K60 444 resolution and HDCP 2.2. The outputs can be individually scaled for 1080p. De-embedded audio as analog L/R and coaxial is available for both outputs. The ARC function can return display device audio to coaxial port output only. Advanced EDID management is supported. With its 18Gbps bandwidth and the additional features with latest HDMI standards. This switcher can be controlled from the front panel, RS-232, IR remote, or TCP/IP.

## 2. Features

- HDMI 2.0, HDCP 2.2 / HDCP 1.4 and DVI 1.0 compliant
- Four 18G HDMI 2.0 video inputs support up to 4K60 444 resolution
- Four 18G HDMI 2.0 video outputs support up to 4K60 444 resolution
- Four outputs can be individually scaled for 4K→1080p
- De-embedded audio to analog L/R and Coaxial ports output
- ARC audio return to the coaxial ports output only
- Built-in Web GUI for TCP/IP control
- Advanced EDID management supported
- Four methods of control: Front panel, RS-232, IR remote and TCP/IP
- Compact design for easy and flexible installation

## 3. Package Contents

Qty	Item
1	4×4 HDMI 2.0 18Gbps Matrix Switcher
1	12V/2.5A Locking Power Adapter
1	IR Remote
2	Mounting Ears
1	38KHz IR Receiver Cable (1.5 meters)
1	3-pin Phoenix Connector
1	User Manual

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### 4. Specifications

Technical	
HDMI Compliance	HDMI 2.0
HDCP Compliance	HDCP 2.2 and HDCP 1.4
Video Bandwidth	18 Gbps
Video Resolution	4K2K 50/60Hz 4:4:4 4K2K 50/60Hz 4:2:0 4K2K 30Hz 4:4:4 1080p, 1080i, 720p, 720i, 480p, 480i All HDMI 3D TV formats All PC resolutions including 1920 x 1200
Output Scaling	4K to 1080p
3D Support	Yes
Color Space	RGB, YCbCr4:4:4, YCbCr4:2:2, YCbCr 4:2:0
Color Depth	8-bit, 10-bit, 12-bit [1080P, 4K30Hz, 4K60Hz (YCbCr 4:2:0)] 8-bit [4K60Hz (YCbCr 4:4:4)]
HDMI Audio Formats	PCM2.0/5.1/7.1CH, Dolby Digital/Plus/EX, Dolby True HD, DTS, DTS-EX, DTS-96/24, DTS High Res, DTS-HD Master Audio, DSD
Coaxial Audio Formats	PCM2.0, Dolby Digital / Plus, DTS 2.0/5.1
L/R Audio Formats	PCM2.0CH
HDR Support	HDR10, HDR10+. Dolby Vision, HLG
ESD Protection	Human-body Model: ±8kV (Air-gap discharge), ±4kV (Contact discharge)
Connections	
Input Ports	4×HDMI Type A [19-pin female]
Output Ports	4×HDMI Type A [19-pin female] 4×L/R audio out [3.5mm Stereo Mini-jack] 4×COAX audio out [RCA]
Control ports	1x TCP/IP [RJ45] 1x RS-232[3-pin phoenix connector] 1x IR EXT [3.5mm Stereo Mini-jack]

# EGE-6UHD-444AL


## 4x4 HDMI 2.0 18Gbps Matrix Switcher



Mechanical			
Housing	Metal Enclosure		
Color	Black		
Dimensions	220mm (W)×105mm (D)×44mm (H)		
Weight	792g		
Power Supply	Input: AC100~240V 50/60Hz Output: DC12V/2.5A (Locking connector)		
Power Consumption	10W (max), 1.56W (Standby)		
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F		
Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F		
Relative Humidity	20~90% RH (non-condensing)		
Resolution / Cable Length	4K60 - Feet / Meters	4K30 - Feet / Meters	1080P60 - Feet / Meters
HDMI IN / OUT	10ft / 3M	30ft / 10M	42ft / 15M
The use of "Premium High Speed HDMI" cable is highly recommended.			

## 5. Operation Controls and Functions

### 5.1 Front Panel

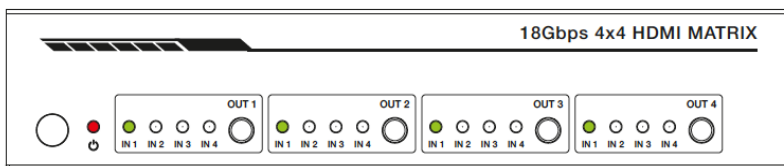


Name	Function description
IR Sensor	IR input for remote control of the switcher.
POWER LED	Red LED indicates that the unit is powered.
OUT 1 / OUT 2 / OUT 3 / OUT 4 Button	Press to select the desired input.
IN 1 IN2 / IN3 / IN4 LED	Green LED indicates when the input is selected for respective output.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### 5.2 Rear Panel

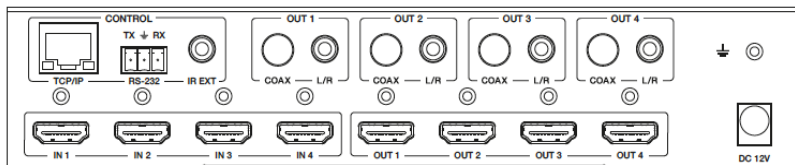

Name	Function description
TCP/IP (RJ45)	Control port for TCP/IP control or accessing the built-in Web GUI.
RS-232	3-pin pluggable connector for RS-232 control of the Switcher.
IR EXT	IR eye input for IR control of the Switcher.
Coaxial Audio OUT 1 / OUT 2 / OUT 3 / OUT 4	RCA connector for coaxial audio output from HDMI OUT 1 / OUT 2 / OUT 3 / OUT 4.
L/R Audio OUT 1 / OUT 2 / OUT 3 / OUT 4	3.5mm Mini-jack connector for stereo audio output from HDMI OUT 1 / OUT 2 / OUT 3 / OUT 4.
Earthing Point	Screw terminal for earthing the Switcher.
HDMI Input 1 to 4	HDMI Source inputs 1 to 4.
HDMI Output 1 to 4	HDMI outputs for displays 1 to 4.
DC 12V IN	DC 12V input for 12V 2.5A PSU.

### 5.3 Connecting to the Switcher

1. Connect the desired HDMI input sources.
2. Connect the desired HDMI display devices.
3. Connect any CONTROL inputs that may be required: TCP/IP, RS-232 or IR IN.
4. Connect any audio devices to either the Coaxial or L/R outputs.
5. Connect the 12V DC PSU.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### 5.4 Using the Switcher

#### 5.4.1 Power LED and Standby Mode


The Power LED provides the following indications:

Color	Description
Red	The Switcher is active and fully controllable
Off	The Switcher is in standby mode, this state can be changed by using API commands or IR Remote, or from the Web GUI interface.

#### 5.4.2 Selecting Inputs

Manual Selection of the inputs is done by briefly pressing the OUT 1 / OUT 2 / OUT 3 / OUT 4 button repeatedly for that channel until the desired input is selected.

### 6. IR Remote

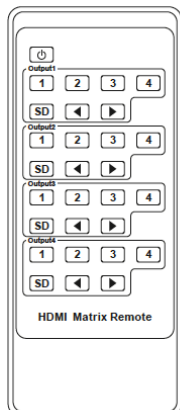

	Power on the Switcher or set it to standby mode.
<b>Output 1 (Output 2 / 3 / 4)</b>	
<b>1/2/3/4</b>	Select the desired input source to Output 1 port output, the corresponding green LED on the front panel illuminates.
<b>SD</b>	Switch downscale or bypass mode to the Output 1 port output.
<b>◀▶</b>	Select the last or next the desired input source to Output 1 port output, the corresponding green LED on the front panel illuminates.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### 7. Using the Built-In Web GUI Interface

The Switcher has a built-in Web interface to provide a means of controlling or configuring various settings. There are six pages available, each of which will be outlined in detail in the following sections:

The six pages are:

1. **Status** – Display information about the firmware and IP setting.
2. **Video** – Switch the desired input source to output and set the preset.
3. **Input** – Display information about the input signal and EDID setting.
4. **Output** – Display information about the output signal and scaler option.
5. **Network** – Allow basic network setting management and login options.
6. **System** – Panel lock, beep, serial baudrate setting and firmware update.

*Note these six pages are only accessible in **Admin** mode, when **User** mode is used only the **Status** and **Video** pages are available.*

To access the Web interface, enter the IP address of the switcher into the address bar of any web browser. The default IP address is **192.168.1.100**. Please see the following operation method.

*Note that if the IP address of the switcher is not known, use the RS-232 command given in the Network Setting section “**r ip addr!**” to discover the current IP address or set the switcher to factory default status and IP address restores to default 192.168.1.100.*

**Step 1:** The TCP/IP port on the rear panel is directly connected to a PC with an UTP cable.




# EGE-6UHD-444AL


## 4x4 HDMI 2.0 18Gbps Matrix Switcher



**Step 2:** Set your PC IP address to the same network segment with Switcher, for instance set PC IP address to 192.168.1.200 and Subnet mask to 255.255.255.0.

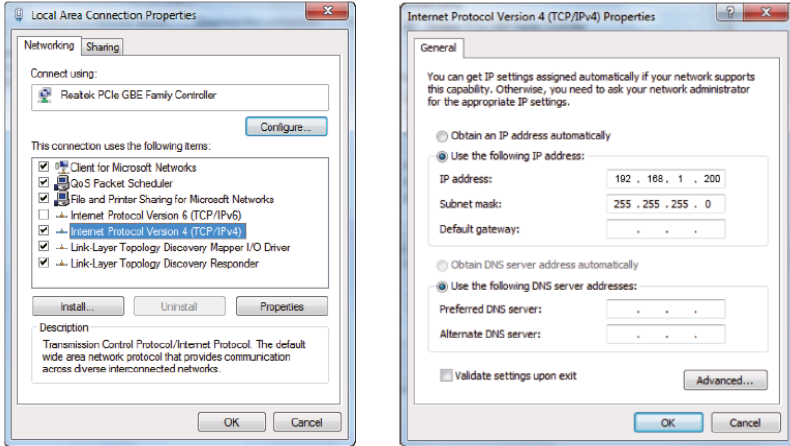

**Step 3:** Enter the Switcher's IP address into your browser on the PC to enter Web GUI page.

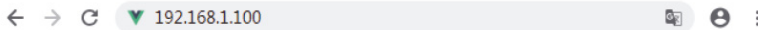

After entering the IP address the following log in screen will appear:



# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



Select the Username from the list and enter the password. The default passwords are:

Username	<b>User</b>	<b>Admin</b>
Password	<b>user</b>	<b>admin</b>

After entering the log in details, click the LOGIN button and the following Status page will appear.

### ■ Status page

The Status page provides basic information about the product Model name, the installed firmware version and the network setting. This page is visible in both User and Admin modes.

Status	
Model	HDP-MXB44P
Firmware Version	v1.00.04/1.37
Hostname	IP-module
IP Address	192.168.1.100
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
Mac Address	6C:DFF8:02:11:D6

The buttons at the top right of the web interface are always available and provide the following function:

- The **Log out** button will disconnect the current user from display the log in screen.
- The **Power on** button changes the power status of the Switcher between On and Stand-by mode.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### ■ Video page

The Video page allows selection of the inputs source and set the presets.

The screenshot shows the '18Gbps 4x4 HDMI & Matrix' web interface. On the left is a navigation menu with 'Video' selected. The main content area is titled 'Switch' and contains two tables.

Outputs	Video Source
Output 1	HDMI 1 INPUT
Output 2	HDMI 2 INPUT
Output 3	HDMI 3 INPUT
Output 4	HDMI 4 INPUT

Presets Name	Presets Set	Presets Save	Presets Clear
preset1	Set	Save	Clear
preset2	Set	Save	Clear
preset3	Set	Save	Clear
preset4	Set	Save	Clear

To this preset setting, first you need to select the desired input source to four output ports. Then click the **Save** button to save the setting. When you click the line **Set** button, this preset you have saved will be used. The **Clear** button will clear the preset. There are four presets setting available.

### ■ Input page

The Input page provides information about which inputs are connected and have a signal present. The inputs can be giving more meaningful names, if desired. The EDID column provides a list of EDID options for each individual input.

The screenshot shows the 'Input Setting' page in the web interface. It features a table with columns for Inputs, Active status, Name, and EDID.

Inputs	Active	Name	EDID
HDMI 1	●	Input1	HK2K01_444 Stereo Audio 2.0 HDR
HDMI 2	●	Input2	4K2K01_444 HD Audio 7.1 HDR
HDMI 3	●	Input3	HK2K01_444 Stereo Audio 2.0 HDR
HDMI 4	●	Input4	4K2K01_444 Stereo Audio 2.0 HDR

Below the table are two sections for EDID management:

- Load EDID to User Memory:** Includes a 'Select EDID File' field with a 'Browse...' button and a 'Select Destination' dropdown menu with options 'User1' and 'Upload'.
- Load EDID to Computer:** Includes a 'Select EDID File' dropdown menu with 'HDMI 1' selected and a 'Download' button.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



The following EDID options are available in any of the EDID drop-down lists:

1080P, Stereo Audio 2.0  
 1080P, Dolby/DTS 5.1  
 1080P, HD Audio 7.1  
 1080I, Stereo Audio 2.0  
 1080I, Dolby/DTS 5.1  
 1080I, HD Audio 7.1  
 3D, Stereo Audio 2.0  
 3D, Dolby/DTS 5.1  
 3D, HD Audio 7.1  
 4K2K30Hz\_444 Stereo Audio 2.0  
 4K2K30Hz\_444 Dolby/DTS 5.1  
 4K2K30Hz\_444 HD Audio 7.1  
 4K2K60Hz\_420 Stereo Audio 2.0  
 4K2K60Hz\_420 Dolby/DTS 5.1  
 4K2K60Hz\_420 HD Audio 7.1  
 4K2K60Hz\_444 Stereo Audio 2.0  
 4K2K60Hz\_444 Dolby/DTS 5.1  
 4K2K60Hz\_444 HD Audio 7.1  
 4K2K60Hz\_444 Stereo Audio 2.0 HDR  
 4K2K60Hz\_444 Dolby/DTS 5.1 HDR  
 4K2K60Hz\_444 HD Audio 7.1 HDR  
 USER\_1  
 USER\_2  
 COPY\_FROM\_TX\_1  
 COPY\_FROM\_TX\_2  
 COPY\_FROM\_TX\_3  
 COPY\_FROM\_TX\_4

This page also provides a means of sending a binary EDID file to either User 1 or User 2 EDID memories:

1. Select the binary EDID file on your PC by click on the Browse button.
2. Select either User 1 or User 2 from the drop-down list.
3. Click the Upload button.

The EDID data from any input or from the User 1 and User 2 locations can be read and stored on your PC.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### ■ Output page

The outputs can also be assigned meaningful names, if desired. The Output page provides information about the signal status of the outputs.

Outputs	Name	Type	Cable	Scaler Mode	ARC	Stream
Output 1	Output1	HDMI	●	Bypass	OFF <b>ON</b>	OFF <b>ON</b>
Output 2	Output2	HDMI	●	4K → 1080P	OFF <b>ON</b>	OFF <b>ON</b>
Output 3	Output3	HDMI	●	AUTO	OFF <b>ON</b>	OFF <b>ON</b>
Output 4	Output4	HDMI	●	AUTO	OFF <b>ON</b>	OFF <b>ON</b>

The **Scaler** mode menu provides the following options:

<b>Bypass</b>	Follow the input source. (Pass-through)
<b>4K→1080P</b>	Downscale to 1080p, if needed.
<b>AUTO</b>	Scaler to match the display requirements.

The **ARC** buttons enable or disable the display device audio to the coaxial audio outputs. If the ARC function enables, the L/R audio port will have no voice output simultaneously.

The **Stream** buttons enable or disable the output signal for the respective output.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### ■ Network page

The Network page allows the configuration of the network settings.

**Note** that the IP address boxes are only accessible when the **Mode** button is set to **Static**.

The log in passwords can be changed on this page.

**Note** that any changes to this page will require the new details into the web browser and/or the log in screen.

The screenshot shows the web interface for the 18Gbps 4x4 HDMI & Matrix switcher. The page title is "18Gbps 4x4 HDMI & Matrix". The top right corner has "Admin", "Log out", and "Power on" buttons. The left sidebar has a "Network" menu item highlighted. The main content area is divided into two sections: "IP Settings" and "Web Login Settings".

**IP Settings**

Mode:  Static  DHCP

IP Address:  Gateway:

Subnet Mask:  Tunnel Port:

**Web Login Settings**

Username:  User  Admin

Old Password:

New Password:

Confirm:

Password:

Product Model:

At the bottom of the form, there are two buttons: "Set Network Defaults" and "Save".

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### ■ System page

The system page allows setting of the panel lock and beep on/off, control RS-232 port baud rate.

This page is also used to install new firmware update, restore the factory default settings and reboot the Switcher.

**HDMI**  
18Gbps 4x4 HDMI MATRIX

Status  
Video  
Input  
Output  
Network  
System

Panel Lock  
OFF ON

Beep  
OFF ON

Serial Baud Rate  
4000 9600 19200 38400 57600 115200

Firmware Update  
Browse Update

Factory Reset  
Reset

Reboot  
Reboot

# EGE-6UHD-444AL

4x4 HDMI 2.0 18Gbps Matrix Switcher



## 8. API control command

The Switcher can also be controlled by RS-232. Connect a PC by using a serial cable and open any of a Serial Command tool on the PC such as Comm Operator, Docklight or hercules, etc to send command for controlling the Switcher. Please see the following connection diagram.

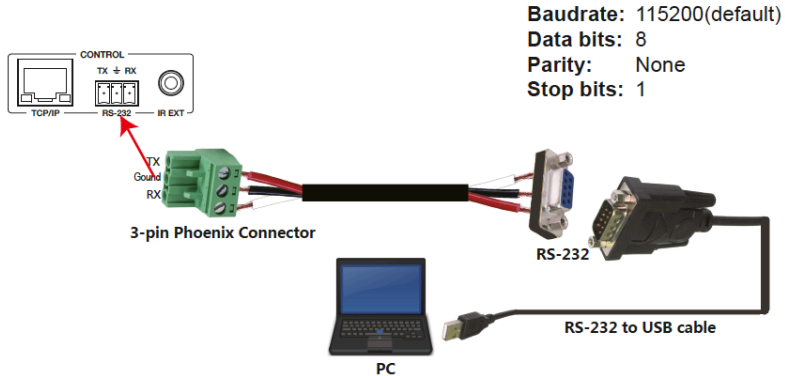


Figure 1: 3-pin phoenix connector to USB

### Important:

1. All messages sent to the Switcher must be terminated with an exclamation mark (!). Any carriage return that is present after the end of the command will be ignored.
2. All spaces shown in the commands are required.
3. All response messages are terminated by a CR/LF sequence.
4. When all four inputs are requested by the same command, the response will report each input on a separate line.
5. When four outputs are requested by the same command, the response will report each output on a separate line.



# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



The ASCII list about the product is shown as below.

ASCII Command		
Serial port protocol: Baud rate : 115200 (default), Data bits: 8bit, Stop bits:1, Check bit: None TCP/IP protocol port: 8000 The x, y, z and XXX are parameters.		
RS-232Command	Function description	Feedback
<b>Power</b>		
s power z!	power on/off the device,z=0~1(z=0 power off, z=1 power on)	power on System Initializing... Initialization Finished! power off
r power!	get current power state	power on /power off
s reboot!	reboot the device	Reboot... System Initializing... Initialization Finished!
<b>SYSTEM Setup</b>		
help!	Lists all commands	
r type!	Get device model	HDP-MXB44P
r status!	Get device current status	Get the unit all status: power, beep, lock, in/out connection, video/audio crosspoint, edid, scaler,hdcp, network status
r fw version!	Get Firmware version	MCU FW version x.xx.xx
r link in x!	Get the connection status of the x input port, x=0~4(0=all)	HDMI IN1: connect
r link out y!	Get the connection status of the y output port, y=0~4(0=all)	HDMI OUT1: connect
s reset!	Reset to factory defaults	Reset to factory defaults System Initializing... Initialization Finished!
s beep z!	Enable/Disable buzzer function,z=0~1(z=0 beep off, z=1 beep on)	beep on / beep off
r beep!	Get buzzer state	beep on / beep off
s lock z!	Lock/Unlock front panel button,z=0~1(z=0 lock off,z=1 lock on)	panel button lock on panel button lock off
r lock!	Get panel button lock state	panel button lock on/off
s save preset z!	Save switch state between all output port and the input port to preset z, z=1~8	save to preset 1
s recall preset z!	Call saved preset z scenarios, z=1~8	recall from preset 1

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



s clear preset z!	Clear stored preset z scenarios,z=1~8	clear preset 1
r preset z!	Get preset z infomation, z=1~8	video/audio crosspoint
s baud rate xxx!	Set the serial port baud rate of RS02 module, z=(115200,57600,38400,19200,9600,4800)	Baudrate:115200
r baud rate!	Get the serial port baud rate of RS02 module	Baudrate:115200
s id z!	Set the control ID of the product, z=000~999	id 888
<b>Output Setting</b>		
s in x av out y!	Set input x to output y, x=1~4, y=0~4(0=all)	input 1 -> output 2
r av out y!	Get output y signal status y=0~4(0=all)	input 1 -> output 1 input 2 -> output 2 ..... input 4 -> output 4
s out y stream z!	Set output y stream on/off, y=0~4(0=all) z=0~1 (0:disable,1:enable)	Enable out 1 stream Disable out 1 stream
r out y stream!	Get output y stream status, y=0~4(0=all)	Enable out 1 stream
s hdmi y scaler z!	Set hdmi output y port output scaler mode, y=0~4 (0=all), z=1~3(1=bypass,2=4k->1080p,3=Auto)	hdmi 1 set to bypass mode
r hdmi y scaler !	Get hdmi output y port output mode y=0~4(0=all)	hdmi 1 set to bypass mode
s hdmi y hdcpc z!	Set hdmi output y port hdcpc status y=0~4(0=all) z=0~1(1=active,0=off)	hdmi 1 hdcpc active
r hdmi y hdcpc!	Get HDCPC status of HDMI out y, y=0~4(0=all)	hdmi 1 hdcpc active
<b>Audio Setting</b>		
s hdmi y arc z!	Turn on/off arc of HDMI output y, y=0~4(0=all) z=0~1(z=0,off,z=1 on)	hdmi output 1 arc on hdmi output 1 arc off
r hdmi y arc!	Get the arc state of HDMI output y, y=0~4(0=all)	hdmi out1 arc on
<b>EDID Setting</b>		
r edid in x!	Get EDID status of the input x, x=0~4(0=all inputs)	IN1 EDID: 4K2K60_444, Stereo Audio 2.0 IN2 EDID: 4K2K60_444, Stereo Audio 2.0 IN3 EDID: 4K2K60_444, Stereo Audio 2.0 IN4 EDID: 4K2K60_444, Stereo Audio 2.0
r edid data hdmi y!	Get the EDID data of the hdmi output y port,y=1~4	EDID : 00 FF FF FF FF FF FF 00 .....

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



s edid in x from z!	<p>Set input x EDID from default EDID z, x=0~4(0=all),z=1~23</p> <ol style="list-style-type: none"> <li>1、 1080p,Stereo Audio 2.0</li> <li>2、 1080p,Dolby/DTS 5.1</li> <li>3、 1080p,HD Audio 7.1</li> <li>4、 1080i,Stereo Audio 2.0</li> <li>5、 1080i,Dolby/DTS 5.1</li> <li>6、 1080i,HD Audio 7.1</li> <li>7、 3D,Stereo Audio 2.0</li> <li>8、 3D,Dolby/DTS 5.1</li> <li>9、 3D,HD Audio 7.1</li> <li>10、 4K2K30_444,Stereo Audio 2.0</li> <li>11、 4K2K30_444,Dolby/DTS 5.1</li> <li>12、 4K2K30_444,HD Audio 7.1</li> <li>13、 4K2K60_420,Stereo Audio 2.0</li> <li>14、 4K2K60_420,Dolby/DTS 5.1</li> <li>15、 4K2K60_420,HD Audio 7.1</li> <li>16、 4K2K60_444,Stereo Audio 2.0</li> <li>17、 4K2K60_444,Dolby/DTS 5.1</li> <li>18、 4K2K60_444,HD Audio 7.1</li> <li>19、 4K2K60_444,Stereo Audio 2.0 HDR</li> <li>20、 4K2K60_444,Dolby/DTS 5.1 HDR</li> <li>21、 4K2K60_444,HD Audio 7.1 HDR</li> <li>22、 USER1</li> <li>23、 USER2</li> <li>24、 Copy_From_Hdmi_Tx_1</li> <li>25、 Copy_From_Hdmi_Tx_2</li> <li>26、 Copy_From_Hdmi_Tx_3</li> <li>27、 Copy_From_Hdmi_Tx_4</li> </ol>	IN1 EDID:1080p,Stereo Audio 2.0
<b>Network setting</b>		
r ipconfig!	Get the Current IP Configuration	IP Mode: Static, IP: 192.168.1.72 Subnet Mask: 255.255.255.0, Gateway: 192.168.1.1 Mac address: 00:1C:91:03:80:01 TCP/IP port=8000, telnet port=10
r mac addr!	Get network MAC address	Mac address: 00:1C:91:03:80:01
s ip mode z!	Set network IP mode to static IP or DHCP, z=0~1 (z=0 Static, z=1 DHCP )	Set IP mode:Static. Please use "s net reboot!" command or repower device to apply new config!
r ip mode!	Get network IP mode	IP mode: Static
s ip addr xxx.xxx.xxx.xxx!	Set network IP address	Set IP address:192.168.1.100 Please use "s net reboot!" command or repower device to apply new config! DHCP on, Device can't config static address, set DHCP off first.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



r ip addr!	Get network IP address	IP address:192.168.1.100
s subnet xxx.xxx.xxx.xxx!	Set network subnet mask	Set subnet Mask:255.255.255.0 Please use "s net reboot!" command or repower device to apply new config! DHCP on, Device can't config subnet mask, set DHCP off first.
r subnet!	Get network subnet mask	Subnet Mask:255.255.255.0
s gateway xxx.xxx.xxx.xxx!	Set network gateway	Set gateway:192.168.1.1 Please use "s net reboot!" command or repower device to apply new config! DHCP on, Device can't config gateway, set DHCP off first.
r gateway!	Get network gateway	Gateway:192.168.1.1
s tcp/ip port x!	Set network TCP/IP port (x=1~65535)	Set tcp/ip port:8000
r tcp/ip port!	Get network TCP/IP port	tcp/ip port:8000
s telnet port x!	Set network telnet port(x=1~65535)	Set telnet port:23
r telnet port!	Get network telnet port	telnet port:23
s net reboot!	Reboot network modules	Network reboot... IP Mode: Static IP: 192.168.1.72 Subnet Mask: 255.255.255.0 Gateway: 192.168.1.1 Mac address: 00:1C:91:03:80:01 TCP/IP port=8000 telnet port=10


**Note** that you can send 'RS232 command' to control the Switcher via Serial Command tool. The 'Function description' explains function about the command. The "Feedback" displays whether the command sends success or not and feedback the information you need to.

# EGE-6UHD-444AL

## 4x4 HDMI 2.0 18Gbps Matrix Switcher



### 9. Application Example

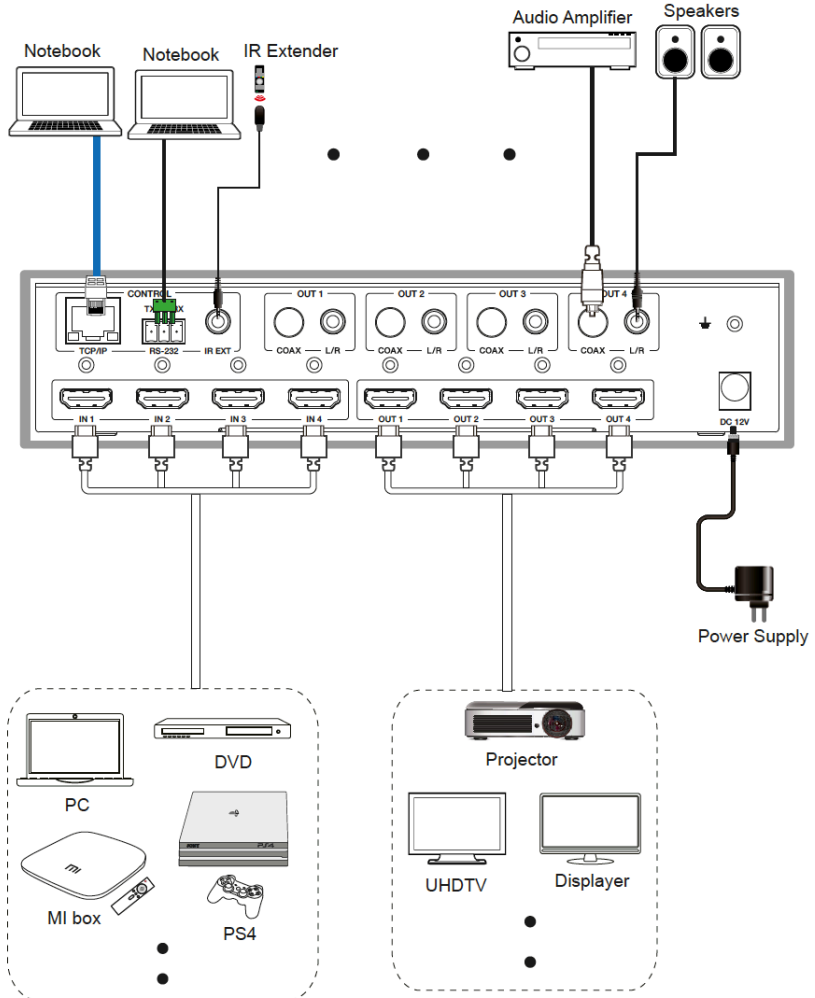

# geratech®



[www.geratech.com.tr](http://www.geratech.com.tr)  
[www.egerate.com](http://www.egerate.com)